



## AMAX PA-1003 HD Streaming Video Drone Instructions

[Home](#) » [AMAX](#) » AMAX PA-1003 HD Streaming Video Drone Instructions 

## Contents

### 1 PA-1003

#### 1.1 INSTRUCTION BOOKLET

##### 1.1.1 PACKAGE CONTAINS:

#### 1.2 FEATURES

#### 1.3 REMOTE CONTROL BATTERY INSTALLATION

#### 1.4 CHARGING THE PA-1003 LI-POLY BATTERY

#### 1.5 INSTALL THE PA-1003 BATTERY

#### 1.6 HOW TO EXPAND AND FOLD YOUR PA-1003

#### 1.7 PA-1003 DIAGRAM

#### 1.8 CONTROLLER DIAGRAM

#### 1.9 WARNING

#### 1.10 FLIGHT PREPARATION

#### 1.11 SYNCING YOUR PA-1003

### 2 NOW YOU ARE READY TO FLY!

#### 2.1 RECOGNIZING THE FRONT & REAR OF THE PA-1003

#### 2.2 STARTING/STOPPING THE ROTORS

#### 2.3 MANUAL START/STOP

#### 2.4 AUTO START/LAND

#### 2.5 SPEED SELECT BUTTON

#### 2.6 T (Training)MODE & OBSTACLE AVOIDANCE TRAINING FEATURE

#### 2.7 FLIGHT CONTROL

#### 2.8 FLIGHT PRACTICE

#### 2.9 ADJUSTING THE TRIM

##### 2.9.1 Forward/Backward Trim

##### 2.9.2 Banking Left/Right Trim

#### 2.10 CALIBRATING THE PA-1003

#### 2.11 HOW TO PERFORM 360° STUNT ROLLS

#### 2.12 USING YOUR ON-BOARD CAMERA AND VIDEO RECORDER

##### 2.12.1 WHAT YOU WILL NEED TO GET STARTED USING YOUR CAMERA

##### 2.12.2 FORMATTING YOUR microSD CARD

##### 2.12.3 INSTALLING THE microSD CARD IN YOUR PA-1003

##### 2.12.4 TAKING DIGITAL PHOTOS

##### 2.12.5 RECORDING VIDEOS

##### 2.12.6 REMOVING YOUR microSD CARD

##### 2.12.7 DOWNLOADING AND CLEARING SPACE ON YOUR microSD CARD

#### 2.13 LIVE VIDEO STREAMING SETUP

##### 2.13.1 WHAT YOU WILL NEED TO GET STARTED USING YOUR CAMERA

#### 2.14 PA-1003 WiFi APP INSTALLATION

#### 2.15 PAIRING PA-1003 TO YOUR COMPATIBLE DEVICE

#### 2.16 QUICK START

#### 2.17 DETAILED APP OVERVIEW

#### 2.18 TROUBLESHOOTING YOUR PA- 1003

#### 2.19 REPLACING THE PROPELLER BLADES

#### 2.20 BLADES GUARD INSTALLATION

#### 2.21 PA-1003 WARNING:

#### 2.22 BATTERY WARNINGS

#### 2.23 CARE AND MAINTENANCE

#### 2.24 Limited 90-Day Warranty

#### 2.25 REPAIR/REPLACE PRODUCT

#### 2.26 IMPORTANT NOTICE:

#### 2.27 PREPARATION FOR SHIPPING YOUR PRODUCT:

### 3 Documents / Resources

#### 3.1 References

### 4 Related Posts

PA-1003

HD STREAMING VIDEO DRONE



INSTRUCTION BOOKLET

WARNING: Never leave product charging unattended for extended periods of time. Always disconnect the battery from charger immediately after the battery is fully charged. Please refer to enclosed safety instructions.

PACKAGE CONTAINS:




PA-1003



2.4G Wireless Controller



Spare Parts

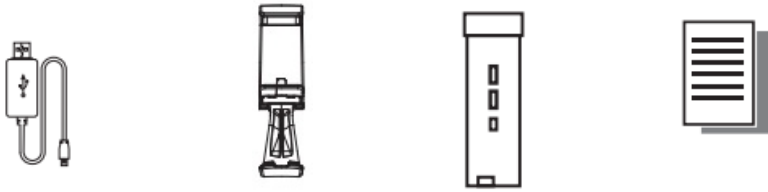

USB Charger Phone Holder Battery Instruction Manual

Colors and styles may vary slightly.

Thank you for purchasing the PA-1003 HD Streaming Video Drone. Please read this instruction booklet as it contains valuable information on how to properly fly and care your PA-1003.


## FEATURES

- Compact fold-in design allows for easy portability
- New obstacle avoidance training feature will cause the drone to automatically circumvent walls and other obstructions so new pilots can get the hang of flying
- Air pressure sensor locks flight altitude for stable video footage
- Takes video and still shots with on board HD Camera
- 6 axis gyro for extremely stable flight and maneuverability

## REMOTE CONTROL BATTERY INSTALLATION

1. Unscrew and remove the battery cover from the back of the controller.
2. Install 3 fresh "AAA" alkaline batteries into the controller as shown in diagram A. Replace the battery cover and secure it.
3. Turn over the controller and press the power button. If the power indicator turns on you have installed your batteries properly.

**A.**

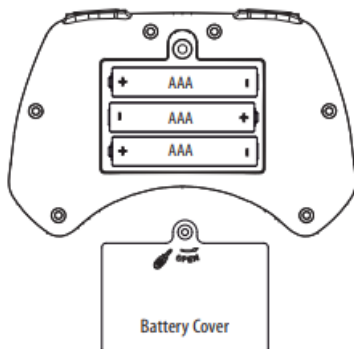


Battery Compartment  
(3"AAA batteries not included)

## CHARGING THE PA-1003 LI-POLY BATTERY

1. Connect the USB charger to the battery charging socket (see diagram B).  
CAUTION: The USB plug fits the charging socket only in one way. Do not force it. Improper connection will damage the PA-1003's battery.
2. Connect the USB end of the cable to your computer's USB port or a USB wall charger (see diagram C).
3. The indicator light on the USB charger will turn to solid red to indicate that the battery is charging. The red LED indicator will turn off when charging is completed.
4. Average charging time is approximately 50-60 minutes (via 5.0V  $\approx$  2A USB wall charger). A fully charged PA-1003 can fly for 5-6 minutes depending on environment and user input.

**IMPORTANT: ALWAYS REMEMBER TO UNPLUG YOUR CHARGING CORD WHEN NOT IN USE!**

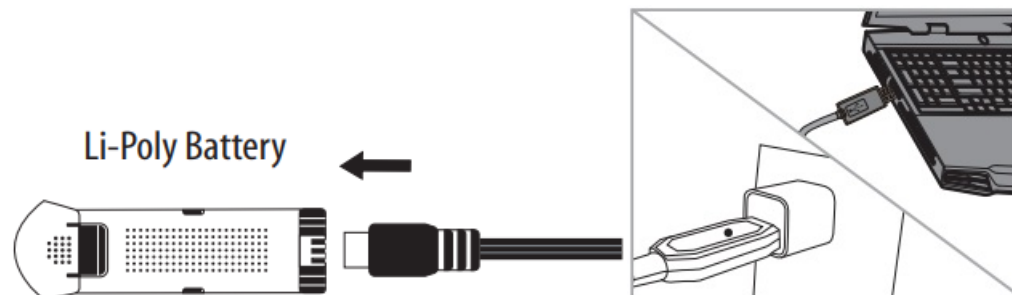


**B.**

**C.**

#### **INSTALL THE PA-1003 BATTERY**

Push the fully charged battery into the battery compartment then lock the end with the battery locks. (see diagram D)


The battery only fits one way to the battery compartment, do not force it.

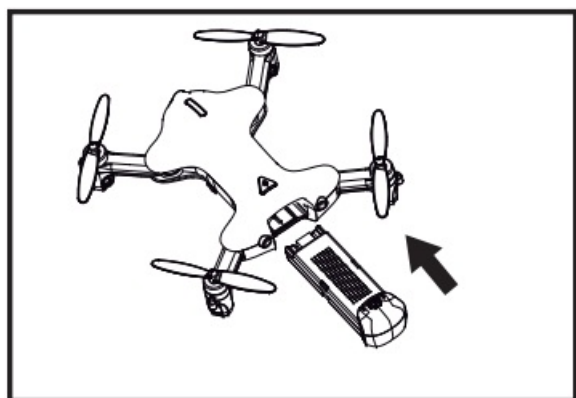

**D.**


#### **HOW TO EXPAND AND FOLD YOUR PA-1003**

Before flying your PA-1003, you need to expand the foldable arms out. Turn your PA-1003 over, bottom side facing you, pull and expand the 4 arms as shown in the diagram below carefully. Make sure the arms are fully expanded to the position. After flying your PA-1003, it is recommended to fold all 4 arms back in. When expanding or folding your PA-1003, make sure to be gentle. (see diagram E)

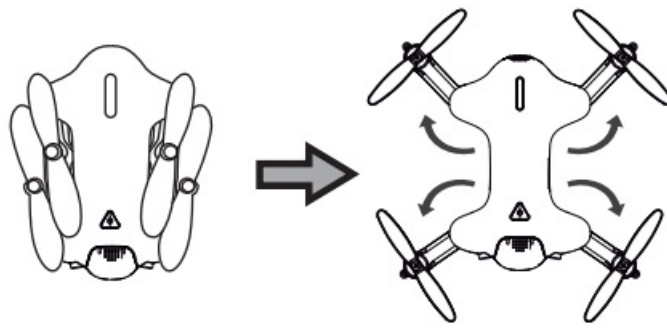


E.

**PA-1003 DIAGRAM**

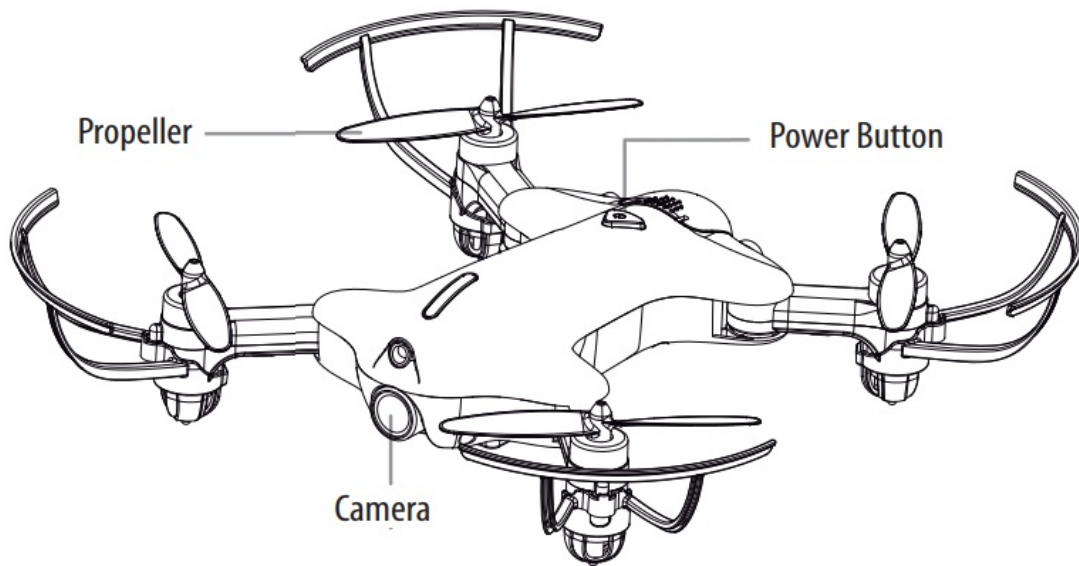

**CONTROLLER DIAGRAM**

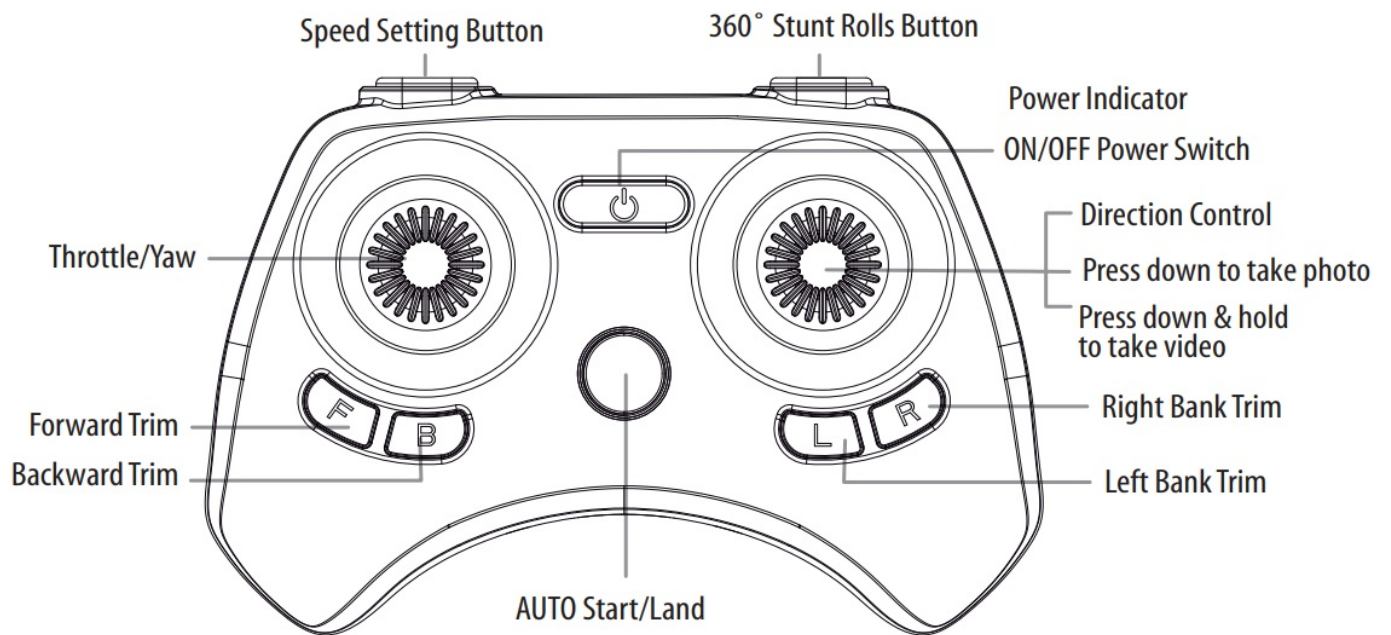

**WARNING**

**DO NOT FLY YOUR PA-1003 IN FOUL WEATHER!**





## FLIGHT PREPARATION

- Verify that there are 3 “AAA” batteries inside the remote control unit and the PA-1003 battery has been fully charged.
- Make sure to be in a large open space preferably a field or a park with an open radius of at least 200 feet.
- Make sure to start your drone on a clean flat level surface before take-off.
- **IMPORTANT! Until you have experience in flying your PA-1003, it is not advised to use in any rate of wind. Pick a day with zero wind or extremely light wind condition when learning how to fly.**


## SYNCING YOUR PA-1003

**Important! When syncing your PA-1003 with the controller always make sure that the drone is on a flat level surface and that your digital trim settings are in the center position.**

1. Before starting, make sure that the power on your controller is off and the battery is removed from the PA-1003. Make sure that there are no other 2.4G devices in the area.
  2. Insert the battery into the PA-1003 and set it down on a flat level surface. Press down the power button and hold for a few seconds (see diagram F). The LED lights on the drone should begin to flash.
  3. Quickly turn ON the remote and you will notice that the top red LED light on the face of the controller.
  4. Push the throttle stick all the way up until it stops and then pull it back all the way down to the bottom (see diagram below). When pushing the stick up or pulling the stick down you should hear a high-pitched beep both ways. The indicating lights on the drone and controller will stop flashing and stay solid on. You have successfully synced your PA-1003 and are ready to fly. If this doesn't happen, repeat steps 1-4 again.
- **TIP 1: Try not to leave too much time between putting your battery into the drone and turning on the controller or your syncing window will time-out.**
  - **TIP 2: Syncing your drone indoors or in the shade will make it easier to see the LED light indicators on both the controller and the drone.**

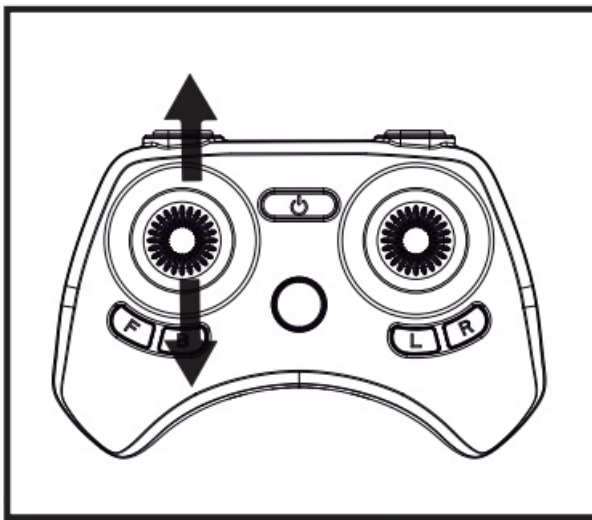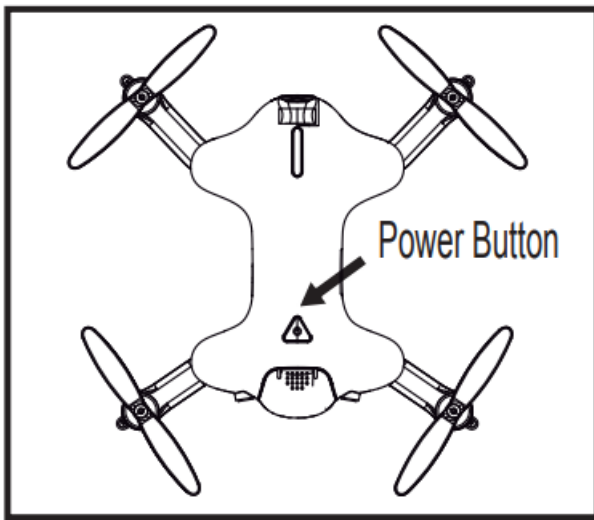

Move the control stick all the way up and all the way down, you should hear two beeps.

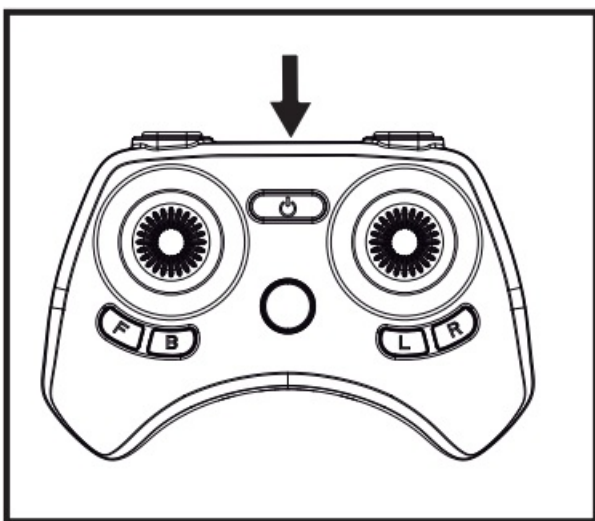


The flashing red LED light will become solid when you are synced.

### **NOW YOU ARE READY TO FLY!**

If you have successfully synced your PA-1003 to your controller as explained on page 4 you are now ready to fly. Before beginning to fly your drone you should familiarize yourself with how to start and stop the rotors, how to use your auto land feature and how the controls work so please carefully read and familiarize yourself with various control features explained in the next. Once again as a beginner pilot you should learn how to control your drone in a large open field or park on a day with zero or very light wind. Do not try to fly your PA-1003 too high until you become a more experience pilot.

### **RECOGNIZING THE FRONT & REAR OF THE PA-1003**

Even though the PA-1003 has four rotors there is still a front or "forward" facing direction and "rear" or backwards facing direction. The front and forward facing direction of the PA-1003 is the side with a camera (see diagram G). The rear and backward facing direction of the drone is the side with a red light (see diagram G).

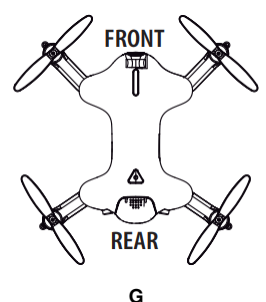

G




## STARTING/STOPPING THE ROTORS

Note: You can start/stop your PA-1003 manually or automatically. Please follow one of the steps below to operate accordingly. Make sure you have properly synced the PA-1003 and the power stays on.

### MANUAL START/STOP


- To start the rotors simply move the two control sticks both down and out (see diagram H1), hold until the rotors start spinning. Now release both sticks to the neutral position and push the throttle up to take off.
- To stop the rotors, after starting the rotor you can simply wait about 15 seconds, and it will stop automatically Or move both sticks down and in to stop immediately (see diagram H2).After take off, you can simply pull the throttle all the way down and land.

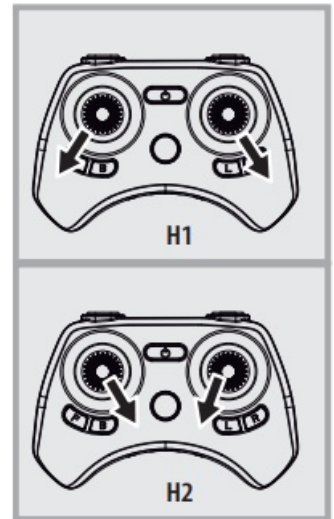

### AUTO START/LAND

The PA-1003 has an auto start/land feature which allows you to start/land automatically. Simply press the **AUTO START / LAND** button on the top of the controller and your PA-1003 will begin taking off/landing(see diagram H3).

**NOTE:** You can still control the direction while auto starting/landing to avoid obstacles.

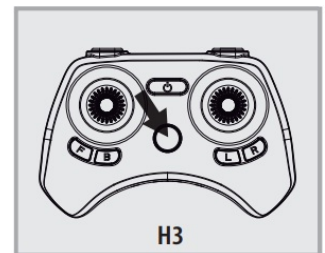

### SPEED SELECT BUTTON

The PA-1003 has 4 speed settings;T(Training),1 (SLOW), 2 (MEDIUM) and 3 (HIGH) The Default setting when you first turn on your PA-1003 is the 1 (SLOW) speed mode.To increase the speed simply trigger the speed setting button (see remote diagram on pg 3) you will hear beeping sounds of the controller will show you what speed setting you are on. Speed settings can be set before flight or during the flight.

### T (Training)MODE & OBSTACLE AVOIDANCE TRAINING FEATURE

Simply press and hold the Speed Button 2 seconds,you will hear a long beep indicating you are in T Mode now.T mode allows you to learn how to operate your PA-1003 at a very slow speed. Also there are maximum and minimum height limits set to avoid crashing to ceiling or floor in T mode.

New obstacle avoidance training feature will cause the drone to automatically circumvent walls and other obstructions so new pilots can get the hang of flying. Set the PA-1003 speed in the T(Training) speed mode the obstacle avoidance feature will start working.

Note: the obstacle avoidance feature only works for T(Training) mode.


### FLIGHT CONTROL

Below is a list of basic flight functions for your long-range remote to control the PA-1003.While learning to fly your PA-1003 it is best to start in a large space with the drone facing away from you until you get used to the basic controls. As you master flying your PA-1003 you can move to more advanced maneuvering techniques. Practice makes perfect!


Move the left Throttle stick up to increase the propeller speed and the PA-1003 will accelerate and ascend.

Move the left Throttle stick down to decrease the propeller speed and the PA-1003 will decelerate and descend


(see diagram I).

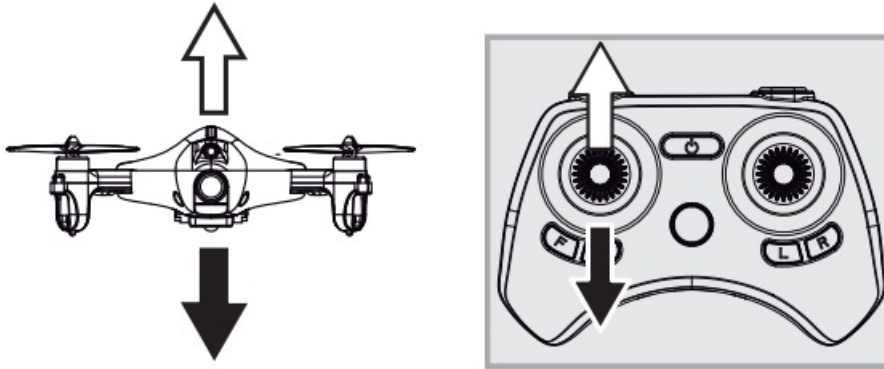


While in the air, move the left Throttle stick left and the PA-1003 will rotate left.  
Move the left Throttle stick right and the PA-1003 will rotate right (see diagram J).

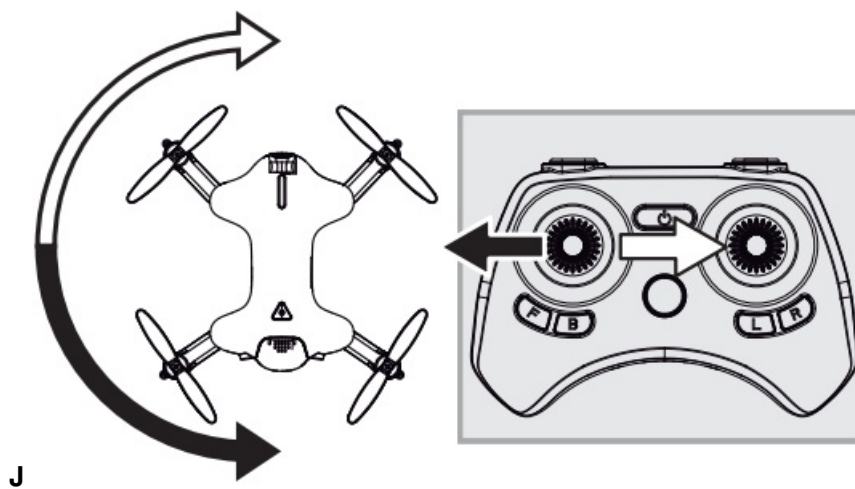

While in the air, move the right Direction Stick up and the PA-1003 will move forward.  
Move the right Direction Control down and the PA-1003 will move backward (see diagram K).

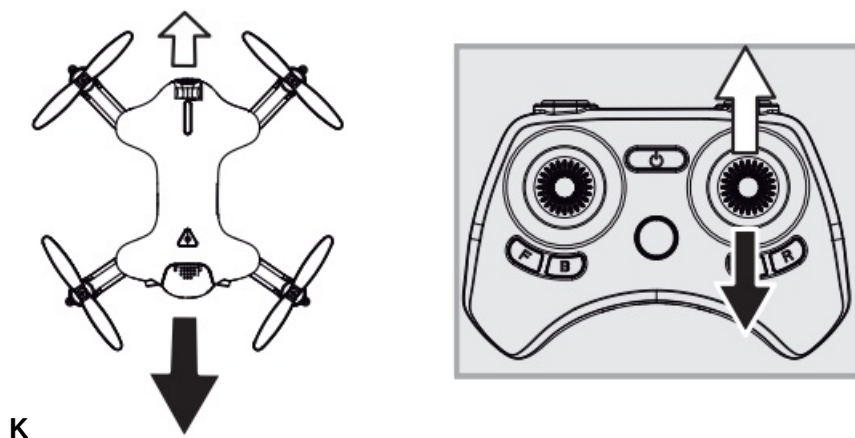


While in the air, move the right Direction Control left and the PA-1003 will bank to the left.  
Move the right Direction Control right and the PA-1003 will bank to the right (see diagram L).

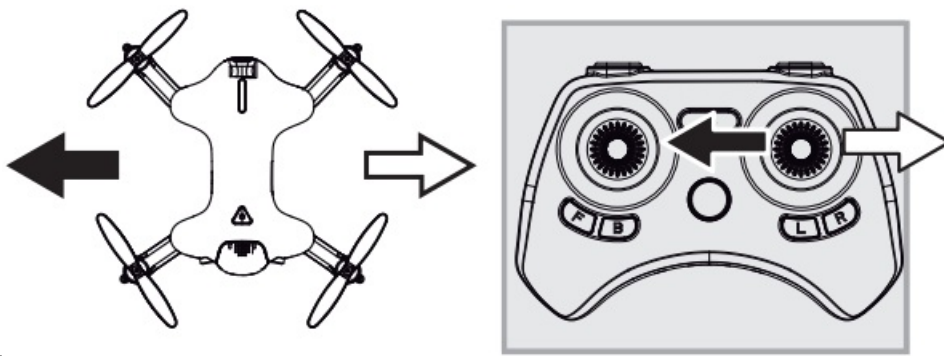

L

## FLIGHT PRACTICE

To master flying your aircraft try practicing the exercises shown below, start with simple vertical takeoffs, landings, and left/right turning and rotating. Once those are mastered move on to square and cross maneuvers. Good luck and have fun!

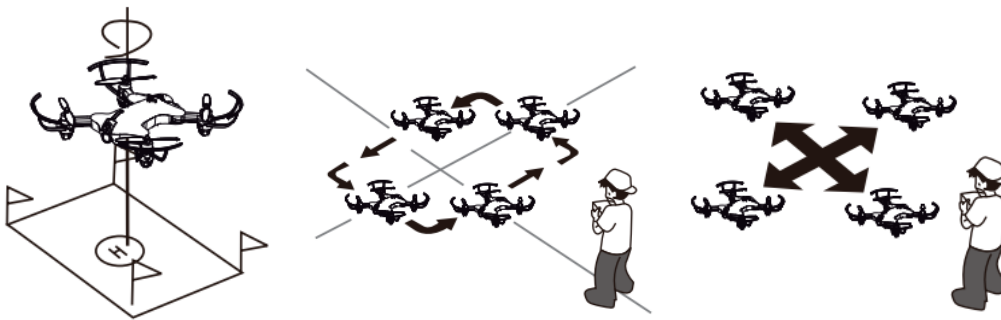


Fixed-Point Landing    Square Pattern Maneuver    Cross Pattern Maneuver

## ADJUSTING THE TRIM


NOTE: The PA-1003 is already properly trimmed and calibrated right out of the box and should not require any trim adjustments before flying. Some more experienced pilots may want to adjust trim settings for their style of flying. After several crashes you may need to adjust trim settings for the PA-1003 to be more balanced.

### Forward/Backward Trim

- If your PA-1003 is moving forwards or backwards automatically, you may need to adjust the FORWARD/BACKWARD TRIM buttons.
- If your PA-1003 drifts forward, push and release the BACKWARD TRIM button repeatedly until the moving stops and proper flight is maintained.
- If your PA-1003 drifts backwards, push and release the FORWARD TRIM button in the same manner until the problem is resolved (see diagram M).
- From time to time you may have to adjust the FORWARD or BACKWARD TRIM buttons to ensure the PA-1003 will hover in mid-air and respond accurately to your commands.

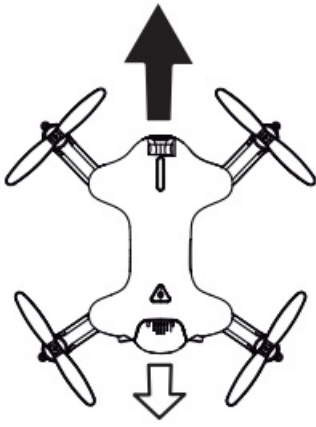


M

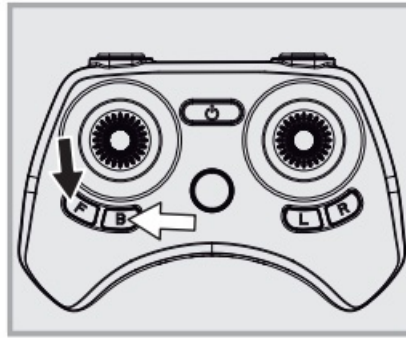


#### Banking Left/Right Trim

- If your PA-1003 is not steadily hovering and is banking to the left or right automatically, you may need to adjust the LEFT BANK or RIGHT BANK Trim buttons.
- If your PA-1003 banks to the left, push and release the RIGHT BANK TRIM button repeatedly until the banking stops and proper flight is maintained.
- If your PA-1003 banks to the right, push and release the LEFT BANK TRIM button in the same manner until the problem is resolved (see diagram N).
- From time to time you may have to adjust the LEFT and RIGHT BANK TRIM to ensure the PA-1003 will steadily hover in mid-air and respond accurately to your commands.

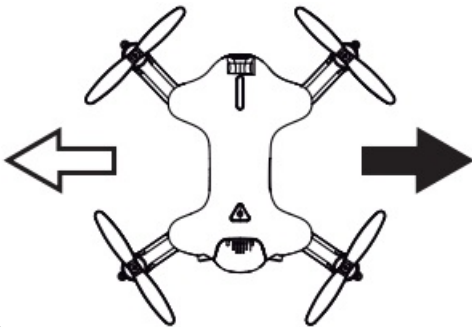

N

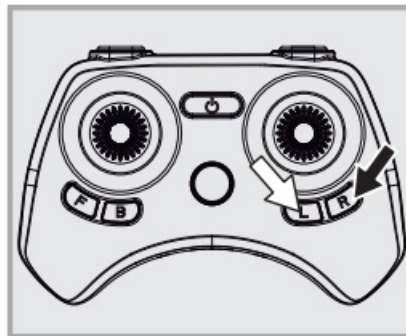

**NOTE: The use of the Trim buttons utilizes sounds. A single long Beep indicates the product is center trimmed. When there's no sound when press the trim means the product is trimmed to the maximum on a particular side.**

#### CALIBRATING THE PA-1003


NOTE: Your PA-1003 comes per-calibrated out of the box so you are ready to fly.

After several crashes and shocks to your gyro sensors, you may notice that your drone is drifting and can not hold its center position as well as it used to.

This most likely means that you need to recalibrate your PA-1003. Please follow the simple instructions below.

1. Place the PA-1003 on a flat level surface
2. Make sure the PA-1003 is on and that the controller is synced (refer to syncing pg 4). Do not start the blades. Instead move both the throttles and control stick down and to the right corner (see diagram R). You will see the lights on the drone rapidly flash and stop. Once the lights stop flashing you have completed your calibration and are ready to fly!

**TROUBLE SHOOTING:** If you do not see the lights flash, first remove the battery from the drone then turn off your controller and start again. Always make sure to put your battery in first, then turn on your controller. Push the left throttle stick up all the way and then pull back down again. When you hear the beep the PA-1003 is synced to the controller and you are ready to calibrate.

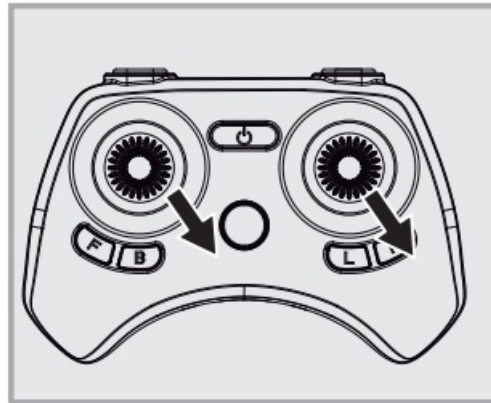


R

### HOW TO PERFORM 360° STUNT ROLLS

Performing 360° stunt rolls with the PA-1003 is as easy as 1-2-3:

1. Hover the PA-1003 in still position making sure that you have at least 5 feet of clearance above and below the quadcopter. Set the speed settings to mode 2 or 3, the PA-1003 can not do the stunt in T(Training) mode and speed 1(SLOW).
2. Press the 360 stunt button down and you will enter the stunt roll mode which is indicated by rapid beeping sounds(see diagram S).
3. Determine which direction you want it to flip and quickly push the right control stick in the direction you want to flip your PA-1003 (see diagram T).

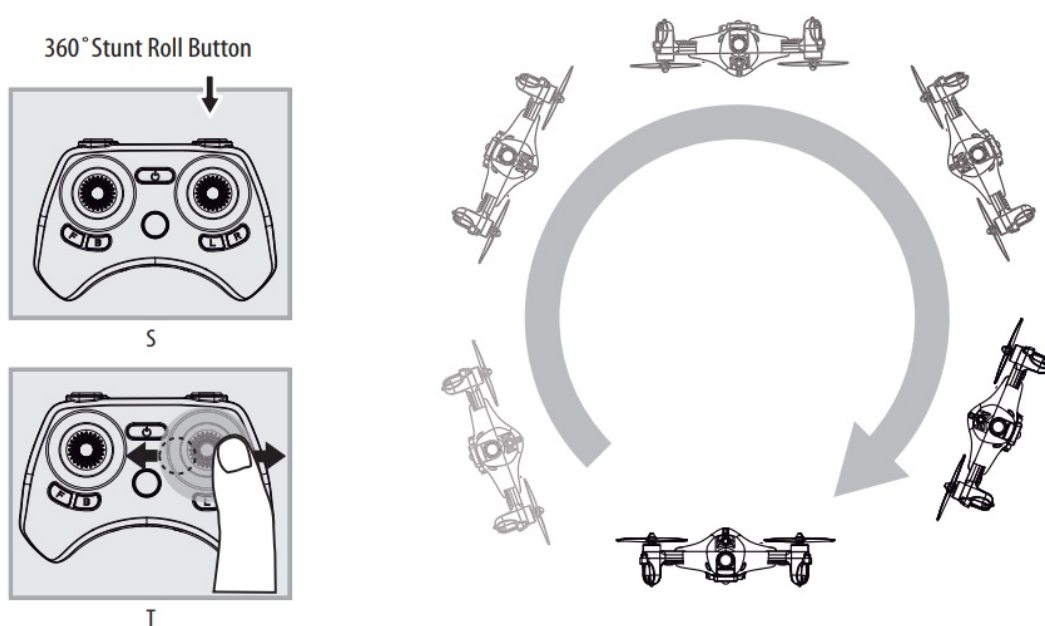

**NOTE:** To exit the stunt roll mode without flip, you can press the button again. The beeping sound will stop.

## USING YOUR ON-BOARD CAMERA AND VIDEO RECORDER

Your PA-1003 comes equipped with an onboard digital camera(1280×720 pixel, 30 frames per second) that takes both video and still photographs. Now you can have hours of fun creating aerial photography and videos for family and friends.

### WHAT YOU WILL NEED TO GET STARTED USING YOUR CAMERA

1. One microSD card(not included).
2. One microSD card reader(included).
3. A Computer with a USB port and Windows Media Player or other Media player that can play AVI files(not included).

### FORMATTING YOUR microSD CARD

Before you can begin to take videos or digital photographs you must first format your microSD card. To format your microSD card simply place the microSD card into the included USB SD card reader and plug it into your computers USB port (see diagram U1 and U2 below). After a few moments an icon will appear on your Desktop. Right click on the Icon and follow instructions to format your microSD card.

### INSTALLING THE microSD CARD IN YOUR PA-1003

- Place the formatted microSD card into the PA-1003 SD card port (see diagram U3 below). Push gently until you hear and feel the microSD card”click”into the SD card slot.
- Turn the PA-1003 on and make sure that it is both fully charged and properly synced to the controller (see HOW TO SYNC YOUR QUADROCOPTER on page 4).

### TAKING DIGITAL PHOTOS

To take photographs short press the CAMERA button of the controller (refer to CONTROLLER DIAGRAM on pg. 3),when you push the button you will hear a “beep” and the red and white led lights on the will flash one time indicating that a picture has been taken.

### RECORDING VIDEOS

To begin recording a video long press CAMERA button for 2 seconds.You will hear 2 “beeps” and the red and white LED lights on the camera start flashing to indicate that you are in video mode and the camera is recording.To stop the video recording, long press the CAMERA button a second time, you will hear a”beep” indicating that the video recording has stopped and the Camera is in ready mode again.

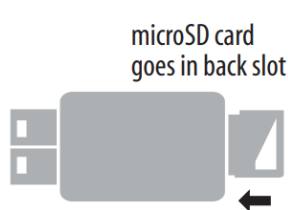


Diagram U1

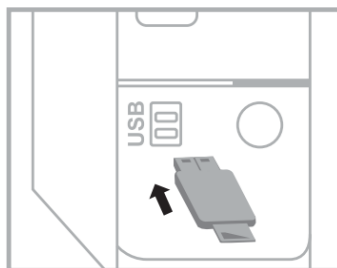


Diagram U2

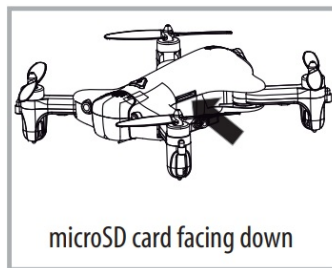


Diagram U3

**IMPORTANT NOTICE: It's recommend to test your camera functions before flying.**

## REMOVING YOUR microSD CARD

To remove your microSD Card push in gently on the back of the SD card with your thumb or forefinger until you hear and feel a “clicking sound”. The microSD card will “pop-out” slightly and is ready for removal. Simply grab and pull gently away from the PA-1003’s camera port to remove the card. Always store your microSD card in a clean, safe and cool environment.

## DOWNLOADING AND CLEARING SPACE ON YOUR microSD CARD

Plug your microSD card into the microSD card reader and connect to your computer. It is best to always download all your videos and pictures on to your computer and not store this data on your microSD card. After downloading your photos and videos , follow your computers instructions to “delete” files on your microSD card.

## LIVE VIDEO STREAMING SETUP


Your PA-1003 comes equipped with an on board digital camera that takes both video and still photographs to your mobile devices.

## WHAT YOU WILL NEED TO GET STARTED USING YOUR CAMERA

1. One Apple or Android phone\* (not included)
2. Voyage1003 APP installed (app store or Andriod market available)

## PHONE HOLDER AND PHONE INSTALLATION

Insert the included phone holder hook (a) to the slots on the top of the controller properly, see the illustration below, When you install the phone holder correctly you can use it to hold your phone (see diagram U4)

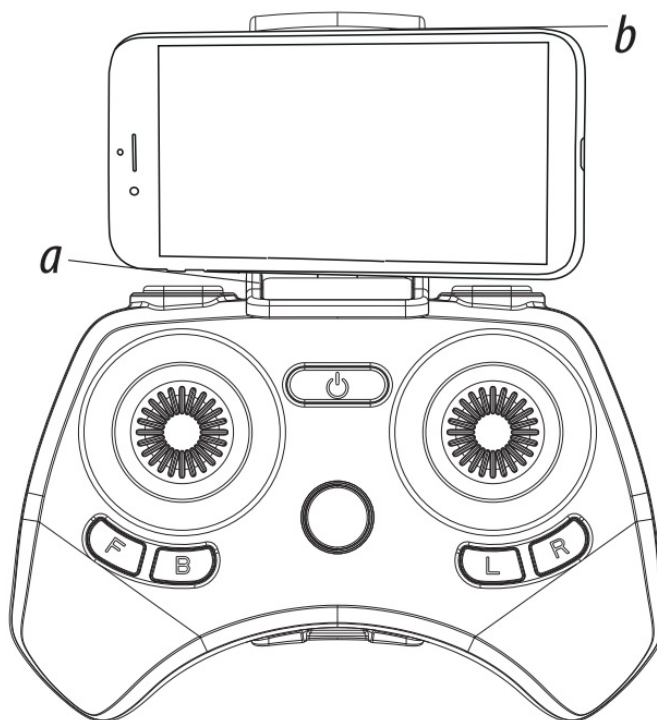


U4

## PA-1003 WiFi APP INSTALLATION

1. Make sure you are using a compatible Android™ or Apple® iOS device.
2. Make sure your device has access to the Internet.
3. For Apple® iOS devices, within the App Store, search and select “ voyage1003 ”. Hit the Install button and the “voyage1003” App should download and install automatically.
4. For Android™ OS devices, visit the Google Play store and search for “voyage1003”. Selecting the “voyage1003 ” App will download the App and automatically install it on your device.
5. After the “voyage1003” App is installed, it should create an icon on your screen. Click the “voyage1003” icon to run the App to make sure that it has installed correctly on your device. If not, please delete and repeat the process again.



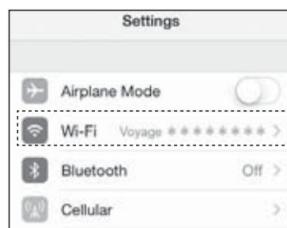


## PAIRING PA-1003 TO YOUR COMPATIBLE DEVICE

1. After completely charging your PA-1003 battery, install the battery to your PA-1003 (Refer to the user manual).
2. In the Settings menu of your device, locate the Wi-Fi option.
3. Turn ON the Wi-Fi option.
4. Select the voyage Wi-Fi network. You will be asked for a password. The password is the 8 numbers that are attached to the Voyage WiFi network. Enter the numbers to activate your account. Return to the Main Menu.



Note: Apple® devices require the use of iOS 7.0 or higher.  
 ANDROID™ devices require the use of OS 4.2.2 or higher.

## QUICK START

1. After you install the App correctly and have paired to the drone successfully, you can open the “voyage1003” App icon. Tap “START” on the bottom right hand side of the screen. You should see the real-time video streaming from your PA-1003 ‘s camera.
2. This App also allows you to control your PA-1003 by your mobile device. To activate the control sticks, tap the “ON” button at the top right hand side of the screen. This will switch the control from your traditional controller to your compatible device. Now click “” to start the motors. The control sticks will show up in the screen for your fly control and you can now use your device as a traditional controller. Or you can click “” to auto launch your PA-1003 in the air and then use your device as a traditional controller. Click this button again, your PA-1003 will automatically land on the floor.
3. You can click “” to take still pictures. Pictures will be stored into your mobile device. To record videos, you can click “”. There will be a timer start running “ on the screen, indicating the recording is on. The video footage will also be stored into your mobile device. Click “” you can see 2 folders, pictures and videos, you can find the pictures and videos you took with your PA-1003.




## DETAILED APP OVERVIEW

Please see images below for a detailed App overview. This overview is also available under the “HELP” icon in the home screen of the App.

## HOME PAGE




## CONTROL STICKS

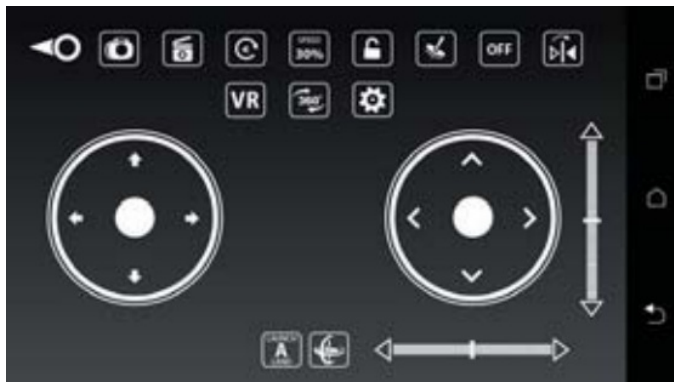


## HELP PAGE 1



## HELP PAGE 2

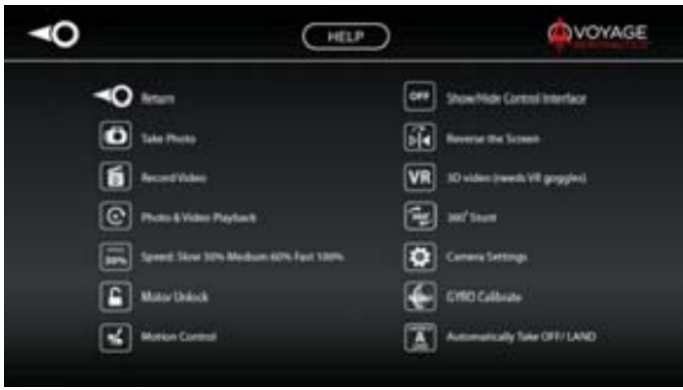

**HELP PAGE 3**

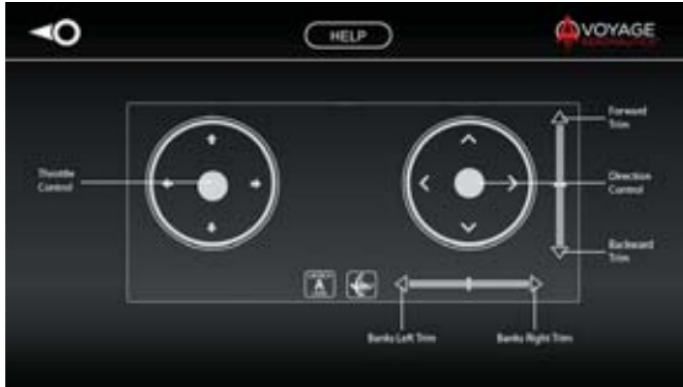

**CAMERA SETTINGS**



If you're still encountering difficulties please contact our customer service department at [customercare@amaxbrands.com](mailto:customercare@amaxbrands.com)

**TROUBLESHOOTING YOUR PA- 1003**

<b>PROBLEM</b>	<b>POSSIBLE CAUSE</b>	<b>POSSIBLE SOLUTION</b>
<b>No Power</b>	<ol style="list-style-type: none"> <li>1. Power switched off</li> <li>2. Polarity is reversed</li> <li>3. Batteries may be low or in need of charging</li> </ol>	<ol style="list-style-type: none"> <li>1. Switch the ON/OFF switch to ON</li> <li>2. Make sure all batteries are installed correctly (see diagram A)</li> <li>3. Replace batteries</li> </ol>
<b>Aircraft Not Responding</b>	<ol style="list-style-type: none"> <li>1. Remote is switched off</li> <li>2. Battery power in remote is too weak</li> <li>3. The remote is not properly synced</li> <li>4. Out of control range</li> </ol>	<ol style="list-style-type: none"> <li>1. PA-1003 the ON/OFF PA-1003 to ON</li> <li>2. Replace remote batteries</li> <li>3. Re-sync the remote</li> <li>4. Do not fly beyond 500 feet</li> </ol>
<b>Aircraft Won't lift off</b>	<ol style="list-style-type: none"> <li>1. Rotor speed too slow</li> <li>2. Aircraft not fully charged</li> <li>3. Obstruction of rotors</li> </ol>	<ol style="list-style-type: none"> <li>1. Push throttle lever forward</li> <li>2. Recharge your PA-1003</li> <li>3. Check rotors for hair or other obstructions</li> </ol>
<b>Aircraft Spins, can not be trimmed</b>	Rotor deformation or bad motor	Replace the damaged rotor (You may need to consult with a Propel customer service personnel)
<b>Aircraft Tilt to one direction</b>	Aircraft did not calibrate properly	Restart the aircraft and controller, properly calibrate it on a flat level surface
<b>Altitude Hold height are not stable (up and down constantly)</b>	Aircraft vibrates too much	Check the propeller deformation

## REPLACING THE PROPELLER BLADES


Your PA-1003's propeller system is a precision instrument that may need repair or replacement from time to time for optimal flight function. Crash landing at high-speed may cause damage to your PA-1003's propellers.

1. The PA-1003 has four sets blades, two sets blades with indication number A & B on front, and two sets blades with indication number B & A on the rear (see the diagram V).
2. When replacing the propeller blades, make sure to match the indication markings on the blades.
3. Unscrew and take off the damaged blade.
4. Replace with new correct blade.

Blade Front Left = A  
Blade Front Right = B


---

Blade Back Left = B  
Blade Back Right = A

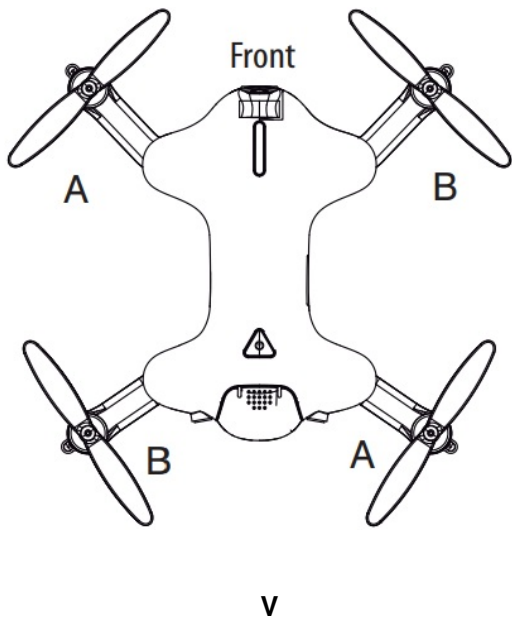


### BLADES GUARD INSTALLATION

Your PA-1003 come with the blade guard for safety flight, it is recommended for beginners. Simply attached the 4 blade guards to each of landing gear (see the diagram W).

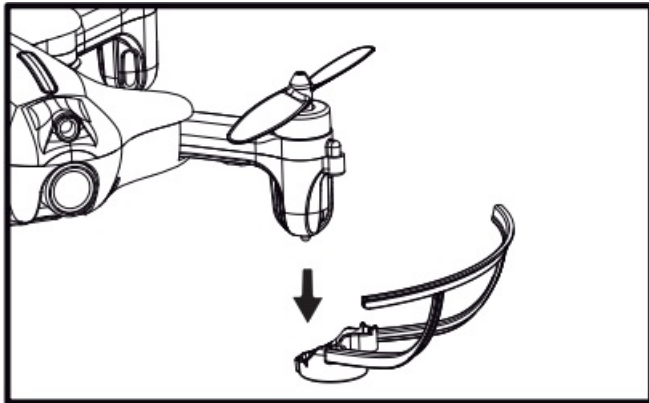

W

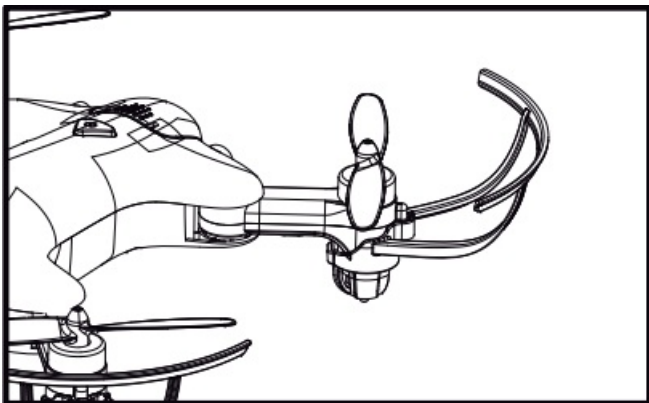

W

## **PA-1003 WARNING:**

The PA-1003 is designed for INDOOR & OUTDOOR use. The PA-1003's blades revolve at high speeds and can cause damage to the user, spectators and animals. Stand away from the PA-1003 to reduce the risk of getting into the flight path. Warn spectators that you will be flying your PA-1003 so that they are aware of its position. Before flight, inspect the rotor blades to make certain that the blades are securely fastened to the PA-1003.

## **WARNING!**

- Choking/Cutting Hazard. Small Parts/Sharp Rotor Blades.
- Keep hands, hair and loose clothing away from the propeller when the power PA-1003 is turned to the ON position.
- Turn off the transmitter and PA-1003 power PA-1003es when not in use.
- The included charger is built specifically for the PA-1003 Li-Poly battery. Do not use it to charge any other battery.
- New alkaline batteries are recommended for maximum performance.
- Parental supervision recommended when flying PA-1003 .

## **BATTERY WARNINGS**

### **RECHARGEABLE BATTERY:**

This PA-1003 uses a Li-Poly rechargeable battery. If battery no longer stays charged, dispose of battery properly according to local disposal requirements.

### **CONTROLLER BATTERIES:**

Remote control requires 3 "AAA" batteries (not included).  
Please read the important battery safety warning below.

- Do not mix alkaline, standard (carbon-zinc) and rechargeable batteries (Nickel Metal Hydride).
- Do not mix old and new batteries.
- Non-rechargeable batteries are not to be recharged.
- Rechargeable batteries are to be removed from the item before being charged (if removable).
- Rechargeable batteries are only to be charged under adult supervision.
- Exhausted batteries should be removed immediately and must be recycled or disposed of properly according to state or local government ordinances and regulations.
- The supply terminals are not to be short-circuited.
- Only batteries of the same or equivalent type as recommended are to be used.
- Batteries are to be inserted with the correct polarity (see inside booklet for diagram).
- Do not dispose batteries in a fire – batteries may leak or explode.

## **CARE AND MAINTENANCE**

- Always remove the batteries from the wireless remote control when it is not being used for an extended period of time.
- To clean, gently wipe the remote control and PA-1003 with a clean damp cloth.

- Keep the toy away from direct heat or sunlight.
- Do not submerge the toy into water. This can damage the unit beyond repair.
- Parental guidance recommended when installing or replacing the batteries.

#### **Limited 90-Day Warranty**

NORTH AMERICA

AMAX Group USA warrants to the original consumer that this product is free from any electrical or mechanical defects for a period of 90 DAYS from the date of purchase. If any such defect is discovered within the warranty period, AMAX Group USA will repair or replace the unit free of charge upon receipt of the unit, shipped postage prepaid and insured to our warranty center **ALONG WITH THE ORIGINAL RECEIPT** evidencing that the product was purchased from an approved AMAX retail partner and that the product is still within the 90 day warranty period. The warranty covers normal consumer use and does not cover damage that occurs in shipment or failure that results from alterations, accident, misuse, abuse, neglect, wear and tear, inadequate maintenance, commercial use or unreasonable use of the unit. Removal of any parts/components voids all warranties. This warranty does not cover cost of repairs made or attempted outside by third-party individuals or companies. Any applicable implied warranties, including warranties of merchantability and fitness, are hereby limited to 90 DAYS from the date of purchase. Consequential or incidental damages resulting from a breach of any applicable express or implied warranties are hereby excluded. Some states do not allow limitations on the duration of implied warranties and do not allow exclusion of incidental or consequential damages, so the above limitations and exclusions in these instances may not apply.

#### **REPAIR/REPLACE PRODUCT**

If your product begins to malfunction or stop working, immediately contact our warranty center (contact details listed below). If it is determined that a return is necessary, our warranty department will issue you an RMA number/form and an address to the nearest return center for shipping the product to us. When honoring the warranty, AMAX reserves the right to either repair, replace or refund the product.

#### **IMPORTANT NOTICE:**

We will reject and return to sender returns that are not accompanied by an AMAX issued RMA form and RMA number so make sure to contact our warranty center before attempting to return your product!

#### **PREPARATION FOR SHIPPING YOUR PRODUCT:**

Please repack your product in a durable box, preferably in the original carton, and send it prepaid, and adequately insured. Include the RMA form that was issued by our warranty department along with your daytime telephone number and email address inside the shipping carton. If your warranty has expired and you still require service please contact our customer care team For further information please send all inquiries to:

[customercare@amaxbrands.com](mailto:customercare@amaxbrands.com)

#### **IMPORTANT NOTICE!**

**DO NOT ATTEMPT TO SHIP YOUR PRODUCT BACK WITHOUT FIRST CONTACTING OUR WARRANTY DEPARTMENT AT:**

[www.amaxbrands.com](http://www.amaxbrands.com)

Email: [customercare@amaxbrands.com](mailto:customercare@amaxbrands.com)

#### **FCC Part 15 C Notice**

CAUTION: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions :

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

### **FCC RF exposure statements**

This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body or nearby persons.

### **IC Radiation Exposure Statement:**

This equipment complies with IC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.



### **WARNING!**

CHOKING HAZARD – Small parts.  
Not suitable for children under 3 years.



Requires Speed Class 6 or higher microSD or microSDHC card(not included)

**microSDHC Logo is a trademark of SD-3C, LLC.**

**Conforms to safety requirements of FCC.**

**Voyage Aeronautics™ is the registered trademark of AMAX Industrial Group LTD.**  
**AMAX Group USA Address: 12645 Memorial Dr Suite FI #388 Houston, TX 77024**  
**2020 All Rights Reserved. Visit us at [www.amaxbrands.com](http://www.amaxbrands.com)**

**Made in China**  
C001-CA-V1.0

**Documents / Resources**



### [AMAX PA-1003 HD Streaming Video Drone](#) [pdf] Instructions

VL-6000R, VL6000R, 2ASK3VL-6000R, 2ASK3VL6000R, VL-6000T, VL6000T, 2ASK3VL-6000T , 2ASK3VL6000T, PA-1003 HD Streaming Video Drone, PA-1003, HD Streaming Video Drone

## References

[Manuals+](#).