




16+
age

Instructions For Use

V1.0

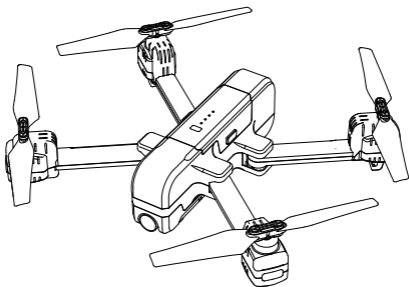

HS270



+1(855) 888-6699



www.holystone.com



usa@holystone.com (USA)
ca@holystone.com (CA)

eu@holystone.com (EU)
jp@holystone.com (JP)

Contents

1.0 Disclaimer&Warning	01
2.0 Safety Guidelines	01
3.0 Maintenance	05
4.0 Package Contents	06
5.0 Drone's Details	07
6.0 Battery of Drone	07
7.0 Transmitter Details	08
8.0 Joystick Mode	09
9.0 Installation	
9.1 Propellers	10
9.2 Unfold the Drone	10
10.0 Charging	11
11.0 Operation Guide	
11.1 Download APP	12
11.2 Connect to WiFi	12
11.3 Paring	13
11.4 Calibrating the Compass	14
11.5 Calibrating the Gyro	15
11.6 GPS Searching	16
11.7 Unlock the Motor	17
11.8 One Key Takeoff / Landing	17
12.0 Functions Details	
12.1 Speed Switch	18
12.2 Emergency Stop	18
12.3 Trimmer Function	19
12.4 Headless Mode	20
12.5 Return to Home	21
13.0 APP Operation Instruction	
13.1 Operation Interface	22
13.2 Beginner's Mode	24
13.3 Way Point Flight	24
13.4 Follow Me	25
14.0 Specifications	26
15.0 Contact Us	28
16.0 General Information	29

1.0 DISCLAIMER & WARNING

1. Please read this Disclaimer & Warning and Safety Guidelines carefully before using our product. This product is not recommended for people under the age of 16. By using this product, you hereby agree to this disclaimer and signify that you have read it fully. You agree that you are responsible for your own conduct and any damaged caused while using this product, and its consequences . You agree to use this product only for purposes that are proper and in accordance with local regulations, terms and all applicable polices and guidelines Holy Stone may make available.

2. When using this product, please be sure to strictly abide by the specification requirements and safety guidelines stated in this document. Any personal injury property damage, legal disputes and all other adverse events caused by the violation of the safety instructions or due to any other factor, WILL NOT be Holy Stone's responsibility.

2.0 SAFETY GUIDELINES

2.1 Check Before Use:

- ① This product is a high precision drone that integrates various electronic stability and control mechanisms. Please be sure to setup this drone carefully and correctly to ensure safe, accident-free operation.
- ② Please be sure that the batteries of the drone and transmitter are clean, undamaged and, fully charged.
- ③ Please be sure that all the propellers are undamaged and are installed in the correct orientation.

④ Please do a thorough check of the product before each use. Inspect the integrity of the parts, any signs of cracks and wear of the propeller, battery power and effectiveness of the indicator, etc. If after doing a complete check any issues are found, please refrain from using the product until the issue has been resolved.

2.2 Flight Environment:



+



+



Fly in Open Areas

**Maintain Line
of Sight**

**Fly Below
390 feet (120 m)**



Avoid flying over or near obstacles, crowds, high voltage power lines, trees, airport or bodies of water.

DO NOT fly near strong electromagnetic sources such as power lines and base stations as it may affect the onboard compass.



Don't use this drone in adverse weather conditions such as rain, snow, fog, and wind.

2.3 Operation Requirements:

- ① Please don't use this product to follow any moving vehicles.
- ② During the flight, only turn off the motor in case of an emergency.
- ③ Please flight the drone back to you as soon as possible when the battery is running low.
- ④ This product should not be used while drinking alcohol, if you are feeling fatigued, taking medicine, or feeling any physical discomfort.
- ⑤ Beware of the noise volume the drone produces. Keep your distance to avoid ear damage.



- ⑥ **Stay away from the rotating propellers and motors.**
- ⑦ **Don't fly in the No-Fly Zone.**

2.4 Use of Battery:

- ① Please ensure batteries are fitted in the correct orientation as shown in the instruction manual.
- ② Avoid short circuits by fitting the batteries correctly, and do not crush or squeeze the batteries as this could carry the risk of an explosion.
- ③ Do not mix new and old batteries as this can lead to a poor performance of the product.
- ④ Dispose used batteries carefully, do not litter.
- ⑤ Please keep dead batteries away from heat and fire.
- ⑥ If the device is not going to be used for an extended period of time, remove batteries to prevent potential damage from battery leakage.

- ⑦ It is recommended to only use the USB charging cable that comes with the drone to charge the battery.
- ⑧ Don't connect the battery directly to wall outlets or car cigarette-lighter sockets.
- ⑨ Don't attempt to disassemble or modify the battery in any way.
- ⑩ Don't use the battery if it gives off an odor, generates heat, becomes discolored or deformed, or appears abnormal in any way. If the battery is in use or being charged, remove it from the device or charger immediately and discontinue use.
- ⑪ Don't pierce the battery casing with a nail or other sharp object, break it open with a hammer, or step on it!
- ⑫ Always charge the batteries in a fireproof container and away from combustible materials. Don't charge on surfaces that can catch fire. This includes: wood, cloth, carpet, or in the application's device.
- ⑬ Don't immerse the battery in water or allow it to get wet.
- ⑭ Don't solder battery terminal directly.
- ⑮ Keep battery out of reach of children or pets.
- ⑯ Don't short-circuit the battery by connecting wires or other metal object to the positive(+) and negative(-) terminals.



Li-Po Battery Disposal & Recycling









Waste Lithium-polymer batteries must not be placed with household trash.
Please contact local environmental or waste agency or the waste agency
or the supplier of your model or your nearest Li-Po battery recycling center.

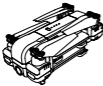


3.0 MAINTENANCE

- ① Clean the product after each use with a clean, soft cloth.
- ② Avoid prolonged exposure to direct sunlight and avoid buildup of heat on the drone.
- ③ This device is not waterproof and must not be submerged in water under any circumstance. Failure to maintain the device completely dry will result in the failure of the unit.
- ④ Check the charging plug and other accessories for signs of damage frequently. If any part of the device is damaged, refrain from flying until maintenance can be carried out.


4.0 PACKAGE CONTENTS

 <p style="text-align: right;">× 1</p>	 <p style="text-align: right;">× 1</p>	 <p style="text-align: right;">× 1</p>
<p style="text-align: center;">Drone</p>	<p style="text-align: center;">Transmitter</p>	<p style="text-align: center;">Drone Battery</p>
 <p style="text-align: right;">× 1</p>	 <p style="text-align: right;">× 4</p>	 <p style="text-align: right;">× 4</p>
<p style="text-align: center;">USB Charging Cable</p>	<p style="text-align: center;">Propeller</p>	<p style="text-align: center;">Screws</p>
 <p style="text-align: right;">× 1</p>	 <p style="text-align: right;">× 1</p>	
<p style="text-align: center;">Screwdriver</p>	<p style="text-align: center;">Instructions For Use</p>	

5.0 DRONE'S DETAILS

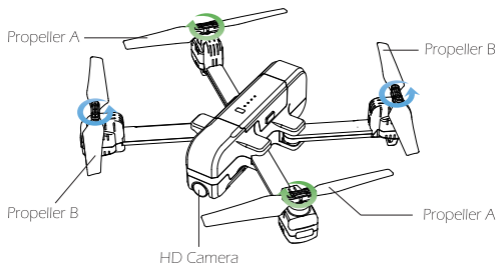

6.0 BATTERY OF DRONE

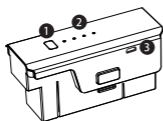

- ① Power Switch
- ② Battery Power Indicators
- ③ Micro USB Charging Port




Press and hold the Power Switch for 3 seconds to turn on, and hold the Power Switch for 3 seconds again to turn off.



Tips:

Once the battery is low, please fly the drone back as soon as possible. Otherwise, it may cause the drone loss.

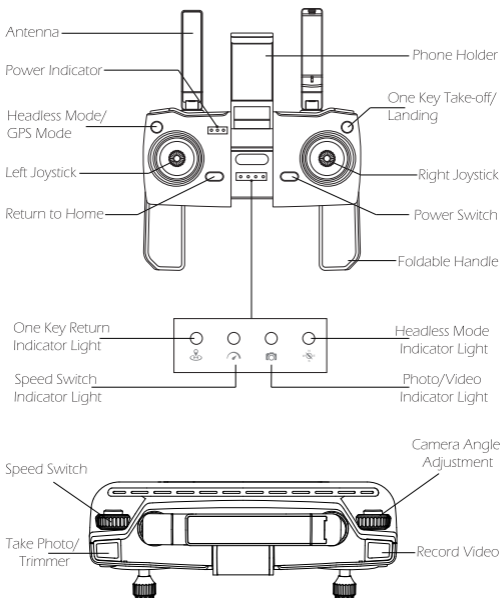7.0 TRANSMITTER DETAILS




ATTENTION:

Press "  " shortly, then quickly press and hold "  " for about 2 seconds to turn off the transmitter.


8.0 JOYSTICK MODE

► 8.1 MODE 2 (Left hand throttle MODE 2 will be default setting.)

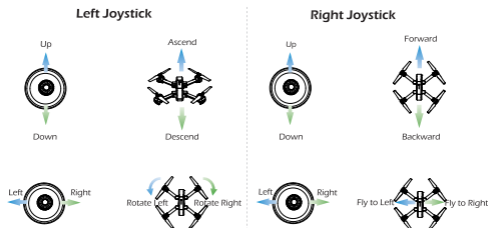


► 8.2 MODE 1

To enter MODE 1, turn on the transmitter while holding the "Take Photo/Trimmer" button. (Please do not release the "Take Photo/Trimmer" button until the transmitter is powered on.)

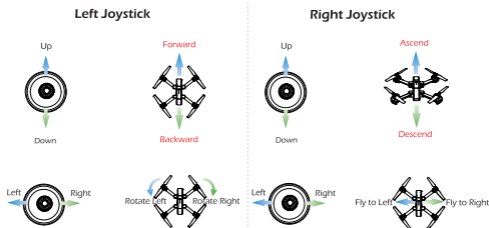


9.0 INSTALLATION

► 9.1 Propeller

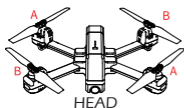


Pic 1

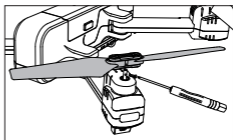

Pic 2

- ① Install the propeller on the motor shaft according to the "A/ B" corresponding position. (Pic 1)
- ② Use a screwdriver to twist and tighten the screws by pressing the clockwise direction. (Pic2)

► 9.2 Unfold the Drone

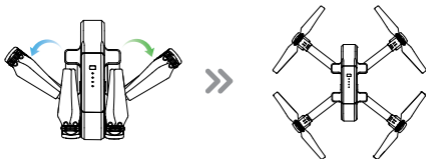


Follow the steps as below to unfold the drone.

Step 1: Unfold the rear arms.


Step2: Repeat again to unfold front arms.

10.0 CHARGING


► 10.1 Drone Battery

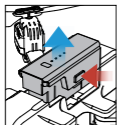

Pull out the battery from the drone.

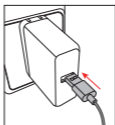


Phone adapter:
5V \equiv 1A/ 2A
(Not included)

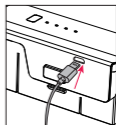




Charging time: 6h
(Depending on charging power)


Connect the battery to the USB charging cable after the battery is removed, and then connect the USB charging cable to a computer or a USB adapter.

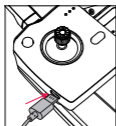► 10.2 Transmitter Battery



Charging time of the transmitter: about 1h

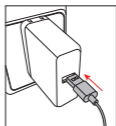


 (Charging) (Fully Charged)



Phone adapter:
5V \equiv 1A/ 2A
(Not included)

Connect the USB charging cable with the transmitter, then, connect the USB charging cable to a computer or a USB adapter.



When the transmitter is in low power, the Power Indicator on the transmitter will blink constantly.

Before charging, please check the contents of the "Use of Battery" section of the "Safety Guidelines" carefully!

11.0 OPERATION GUIDE

► 11.1 Download APP




iOS



Android APP on Google play

Scan the QR code, connect to the App Store™ or Google™ Play and download the “HS GPS V1” application for free.

► 11.2 Connect to Wi-Fi

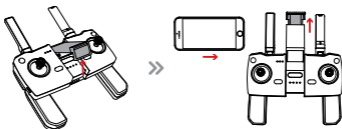

- ① As shown above, pull up the phone holder and lock the phone.
 - ② Connect your smart phone to the Wi-Fi network created by the Drone. Check the drone's status in the **HS GPS V1** App.
 - ③ Your smartphone will launch a search of the available Wi-Fi networks:
 - ④ Select the Wi-Fi network: **HolyStoneFPV_*******.
 - ⑤ Wait for several seconds until your smartphone connects to the Wi-Fi network of the drone. **This connection is generally represented by the Wi-Fi logo appearing on your smartphone's screen.**
 - ⑥ Enter the **HS GPS V1** application.
- > The connection between your smartphone and the Drone will be established automatically.


All of the following operations on this manual is under MODE 2.

► 11.3 Pairing


① Long press the Power Switch to turn on the drone.



② Place the drone on a flat and level surface with the head forward and the tail towards the pilot.

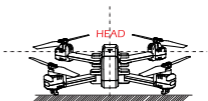


③ Press the  button to turn on the transmitter.


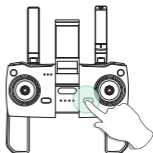


④ Push the left joystick up then down to pair the drone with the transmitter. The indicator lights on the drone will flash White in front and Blue in rear if the drone is paired successfully.

(When it is interfered, the indicator lights will flash Pink in front and Purple in rear.)


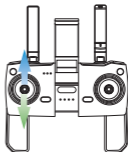


► 11.4 Calibrating the Compass

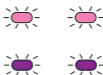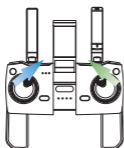


Step 1:

Simultaneously push the left stick to top right corner and the right stick to the top left corner. The front Pink lights and the rear Purple light will turn to flash quickly.

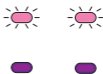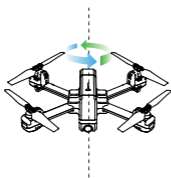

Step 2:


Hold the drone horizontally and rotate it until the rear lights turn solid Purple.

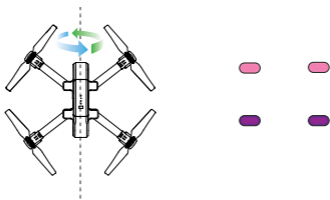

Step 3:

Hold the drone vertically and rotate it until the front Pink lights turn solid.


► 11.5 Calibrating the Gyro

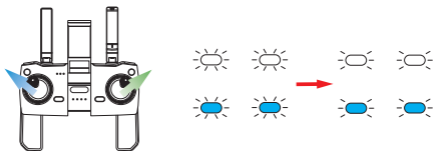

Simultaneously push the left stick to top left corner and the right stick to the top right corner. When the drone's front White indicator light and rear Blue indicator light change from quick flash to slow flash, and the camera turns once, the gyroscope calibration is completed.

Tips: To ensure a stable flight, we suggest that the pilot calibrates the gyro every time after pairing and a crash.

► 11.6 GPS Searching (DO NOT use GPS Mode indoors)

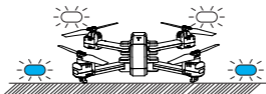

– Place the drone on a flat and dry surface where is unobstructed and lit area.

– The front White indicator light and the rear Blue indicator will flash quickly. This means the drone is searching the GPS Signal.

This process will take about one minute.


When four lights turn solid, GPS Mode is Ready (Only when the drone is connected to GPS successfully can it take off).

– Blue (rear) and White (front) lights are all solid (no blinking).

ATTENTION:


① If the LED Flight Indicators keep blinking quickly, it indicates drone is searching for GPS signals.

② If the drone keep blinking quickly after a few minutes, it indicates that the process has FAILED. Please take the drone to another place, and repeat all the Compass Calibration operations until the process is successful.

③ When flying indoors, please hold  button for 3 seconds to exit GPS Mode, and the LED lights will blink slowly. You can fly this drone when you complete the Compass Calibration operations if you exit GPS Mode.



► 11.7 Unlock the Motor

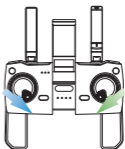Simultaneously push the left stick to lower right corner and the right stick to the lower left corner. The propellers rotate, indicating the drone is unlocked.




► 11.8 One Key Takeoff/ Landing



- ① Press the One Key Takeoff button (), the drone will automatically takeoff and hover at about 5 feet altitude.
- ② When the drone is flying, press the One Key Landing button (), the drone will automatically land on the ground.

12.0 FUNCTIONS DETAILS

▶ 12.1 Speed Switch

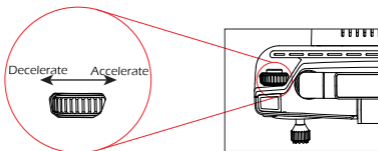


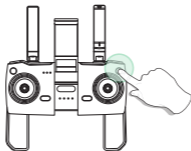
This drone comes with 3 speed modes (Low/ Medium/ High). Dial the wheel (⊖^{SPEED}⊕) to the right to accelerate. Dial to the left to decelerate.


If the Speed Indicator Light on the transmitter is turned off, it means the drone is in low speed. If the light is turned on, it means the drone is in medium speed. If the light is blinking, it means the drone is set to high speed.

(Medium Speed is default setting!)



▶ 12.2 Emergency Stop


 The Emergency Stop function should only be used in case of the emergency during the flight to avoid any damage or injury.






Long press One Key Takeoff / Landing button () for 2 seconds, the motors will stop immediately and the drone will fall directly.

► 12.3 Trimmer Function **(Trim under NO GPS Mode)**

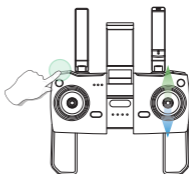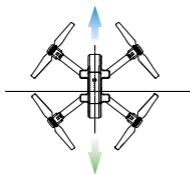


F/B Sideways Drift Trim : If the drone drifts forward, hold down the Trimmer button () and do not release it while pushing the direction joystick down to balance the drone. If the drone drifts backwards, hold down the Trimmer button and do not release it while pushing the direction joystick up to balance the drone.

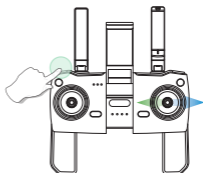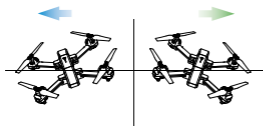

L/R Sideways Dip Trim: If the drone drifts left, hold down the Trimmer button () and do not release it while pushing the direction joystick right to balance the drone. If the drone drifts right, hold down the Trimmer button and do not release it while pushing the direction joystick left to balance the drone.

► 12.4 Headless Mode

1. Press the Headless Mode button (Ⓢ) on the transmitter. A beep will be heard from the transmitter, and the Headless Mode Indicator on the transmitter lights up, indicating that the drone enters Headless Mode.
2. Press the Headless Mode button (Ⓢ) again, and you will hear one long beep, the Headless Mode Indicator on the transmitter is off which indicates the drone exits the Headless Mode.

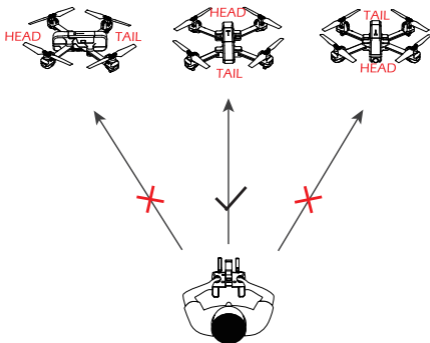

Please make sure the pilot stays in the same orientation as the drone head is facing when the drone takes off.

Under Headless Mode, the forward direction is the direction that the head of the drone faces when the drone takes off.

In order to make sure the pilot can tell the drone's direction, we recommend that pilots stay in the same orientation as the drone head faces when the drone takes off.

If so, when the pilot pushes the direction joystick forward/ backward, the drone will fly forward/ backward toward him/ her. If the pilot moves the right stick left/ right, the drone will move left/ right relative to the pilot.

► 12.5 Return to Home (RTH)

The Return to Home (RTH) function brings the drone back to the last recorded Take-Off Point. **This function can only be achieved in GPS mode.**

There are three types of RTH:

Smart RTH / Low-Battery RTH / Failsafe RTH.

12.5.1 Smart Return To Home

Press the Return to Home button () on your transmitter, and the transmitter will start beeping.

Your drone will return to the TAKE OFF Point. Press the button () again to stop RTH procedure. Push the throttle joystick down to land the drone on a safe area.

12.5.2 Low-Battery RTH

Low-Battery RTH is triggered when the flight battery level is low. At this time, the front white indicator light and the rear red indicator light flash quickly. When Low-Battery RTH is activated, the drone will fly back to where is away from you about 100 feet, and you can still control your drone. Push the throttle down to land the drone in a safe area. When the power of drone is completely empty, drone will return to the TakeOff point where you set.

12.5.3 Failsafe RTH










Drone will enter Return to Home Mode if the signal between the drone and the transmitter lost. The four red indicator lights will flash quickly. The drone will fly back to where is away from you about 100 feet, and the drone will rebind to the transmitter by itself. When the drone flies back into your view, you can control it again.












 **This drone is NOT equipped with obstacle-avoidance.**

13.0 APP OPERATION INSTRUCTION

► 13.1 Operation Interface



	Return: Returns the main interface.
	Controls ON/OFF
	TapFly: Operator can set any points on the map to draw the flight path, and then the drone will fly along this route. <i>(It is recommended to enlarge the map.)</i>
	Media Gallery: Photos or video can be viewed.
	Flight Record: Tap to view historical data on flight date, distance, speed and altitude.
	3D VR: Match with VR glasses (Not included) to watch 3D images in real time.
	Flip Screen: Application interface can be 180 ° flip.
	GPS Signal: Displays current GPS signal strength.
	Setting: Tap the icon to enter the setting interface, settings for flight height / distance and return altitude.

	Follow Me: There are two modes of Follow Me Mode and Lock Follow Mode.
	Follow Me Mode: The drone stays at a distance from the operator and following the GPS position of the phone.
	Locked Follow Mode: After locking the following target, the camera is always oriented towards the following target, but the position of the drone remains unchanged. <i>(The following target should not move too fast to avoid following loss.)</i>
	Return to Home: The drone will return to the last recorded Take-Off Point.
	Auto Take-off: The drone will take off automatically to a height of 5 feet.
	Auto Landing: The drone will land slowly on the ground.
	Take Photo: Tap to take one photo at a time.
	Take Video: Tap once to start recording; tap again to stop recording.
	Sound Recording: The device can record the operator's voice while the camera is recording.
	Transmitter Battery Level: Real-time display of the current remaining battery level of the transmitter.
	Drone Battery Level: Real-time display of the current remaining battery level of the drone.
<p>Waiting for GPS Signal</p> <p>↑</p> <p>Drone Status</p>	<p style="text-align: right;">Speed (Meter/Sec.)</p> <p style="text-align: center;">D:00 H: 0.0 DS: 0.0 VS: 0.0</p> <p style="text-align: right;">Height (Meters)</p> <p style="text-align: right;">Distance (Meters)</p>

► 13.2 Beginner's Mode

The Default GPS Mode is Beginner Mode, Under Beginner Mode:

1. Flight Distance is limited between 0~30m / 0~98.4feet.
2. Flight Altitude is limited between 0~30m / 0~98.4feet.
3. RTH Altitude is under 25m / 82feet.

You only can Turn-off the BEGINNER MODE to modify the parameters in the APP on your phone after you complete the Compass Calibration operations.




► 13.3 Way Point Flight




- Firstly, make sure to download and save the local map in your smart phone, then you can start the Way point flight.
- Successfully connect the drone WIFI with your smart phone, click on the App, then you can find a RED CIRCLE (LIMITED FLIGHT RANGE) / TAKE-OFF POSITION/ AIRCRAFT CURRENT POSITION on the map, mark the points (16 points at most) you plan to fly within the RED CIRCLE range on the map. If you would like to reset the points or flight path, click **Default** or **Default**. Click **Send**, confirm to start Way Point Flight. Pushing the Right Joystick to cancel the Way Point Flight Function.

► 13.4 Follow Me

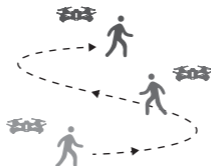

When the Follow Me function activated, the drone will follow the GPS in your smart phone to follow you wherever you go.

(Make sure the smartphone connect with the drone successfully, and turn on the APP on your smart phone.)

1. Make sure the drone flies 10 feet away , 100 feet height position.
2. Click  on the APP interface.
3. Wait for APP Drone Status to display “Follow Me ready”— the drone will follow the phone’s coordinates.
4. Click the  on the APP interface again to exit the Follow Me mode.

Tips:

Follow Me mode would be hardly activated if phone’s GPS signal is too weak, This could be due to the signal loss from surrounding buildings, trees, or interference from too many mobile phones in the area.

Use in the open area and be mindful of your surroundings. Drone is **NOT** equipped with obstacle avoidance.

14.0 SPECIFICATIONS

DRONE

Model: HS270

Weight: 595g/ 21oz

Flight Time: 18 minutes

Operating Temperature Range: 32° to 104°F

Dimensions: 428 x 295x 80mm (Unfolded drone)

195 x 104x 80mm (Folded drone)

DRONE BATTERY

Capacity: 3500 mAh

Voltage: 7.4 V

Battery Type: Li-Po

Charging power: 5~10W

Charging Temperature Range: 41° to 104°F (5° to 40°C)

Charging Time: about 6h

TRANSMITTER

Operating Frequency: 2.4GHz

MAX Transmission Distance: 1968 feet (outdoors and unobstructed)

Battery Type: 3.7V 300mAh Li-Po battery

Charging Time: about 60 minutes

Operating Temperature Range: 32° to 104°F

CAMERA

Camera Frequency: 5GHz

Camera Resolution: 3840×2160P (stored in TF card)

2976×1680P (stored on mobile phone)

Lens: FOV 120°/2.0

Camera Adjustment Angle: -90°~0°

FPV Distance: 1312 feet (outdoor and unobstructed)

Photo: JPEG

Video: AVI / MP4

Max Video Bitrate: 25 fps

MAX Supported TF Cards: 32 GB (Not included)

Operating Temperature Range: 32° to 104°F

USB CHARGING CABLE


Voltage: 5 V

Rated Power: ≤10 W

15.0 CONTACT US

Please do not hesitate to contact us if you need further support.

 usa@holystone.com (America)
ca@holystone.com (Canada)
eu@holystone.com (Europe)
jp@holystone.com (Japan)

 +1(855) 888-6699

16.0 GENERAL INFORMATION

FCC Notice:

This device complies with Part 15 of the FCC Rules.

Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

WARNING: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

RF Exposure

The equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This device should be installed and operated with minimum distance 20cm between the radiator & your body.

IC Notice:

This device complies with Canada Industry licence-exempt RSS standard(s). Operation is subject to the following two conditions:

- (1) this device may not cause interference; and
- (2) this device must accept any interference. Including interference that may cause undesired operation of the device.

CAN ICES-3 (B)

Avis d'Industrie Canada

Le présent appareil est conforme aux CNR d'industrie Canada applicables aux appareils radio exempts de licence L'exploitation est autorisée aux deux conditions suivantes:

- 1) l'appareil ne doit pas produire de brouillage; et
 - 2) l'utilisateur de l'appareil doit accepter brouillage radioélectrique subi même si le brouillage est susceptible d'en compromettre le fonctionnement.
- Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

CAN NMB-3 (B)

RF Exposure

RF warning for Portable device:

The device has been evaluated to meet general RF exposure requirement.
The device can be used in portable exposure condition without restriction.

Déclaration d'exposition aux radiations:

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlé. Cet équipement doit être installé et utilisé avec un minimum de 20 cm de distance entre la source de rayonnement et votre corps.

HOW TO RECYCLE THIS PRODUCT

This symbol on the product or its documentation indicates that it must not be disposed of with household waste.

Uncontrolled waste disposal may harm the environment or human health. Please separate your device from other types of waste to recycle it responsibly.


This will help to foster the sustainable re-use of material resources.

We invite you to contact your retailer or inquire at your local town hall to find out where and how the drone can be recycled.



BATTERY WARNING:

1. Failure to follow all the instructions may result in serious injury, irreparable damage to the battery and may cause a fire, smoke or explosion.
2. Always check the battery's condition before charging or using it.
3. Replace the battery if it has been dropped, or in case of odor, overheating, discolouration, deformation or leakage.
4. Never use anything other than the approval LiPo charger the battery. Always use a balancing charger for LiPo cells or a LiPo cell balancer. It is recommended that you do not to use any other charger than the one provided with the product.
5. The battery temperature must never exceed 60°C (140°F) otherwise the battery could be damaged or ignite.
6. Never charge on a flammable surface, near flammable products or inside a vehicle (preferably place the battery in a non-flammable and nonconductive container).
7. Never leave the battery unattended during the charging process. Never disassemble or modify the housing's wiring, or puncture the cells. Always ensure that the charger output voltage corresponds to the voltage of the battery. Do not short circuit the batteries.
8. Never expose the LiPo battery to moisture or direct sunlight, or store it in a place where temperatures could exceed 60°C (car in the sun, for example).
9. Always keep it out of reach of children.
10. Improper battery use may result in a fire, explosion or other hazard.
11. Non-rechargeable batteries are not to be recharged. Rechargeable batteries are only to be charged under adult supervision.
12. Different types of batteries or new and used batteries are not to be mixed.

13. Batteries are to be inserted with the correct polarity.
14. The supply terminals are not to be short-circuited. Regular examination of transformer or battery charger for any damage to their cord, plug, enclosure and other parts and they must not be used until the damage has been repaired.
15. The packaging has to be kept since it contains important information.
16. The toy is only to be connected to Class II equipment bearing the symbol. 



FAA REGISTRATION: PLEASE FOLLOW ALL FEDERAL, STATE AND LOCAL FAA LAWS. YOU MAY BE REQUIRED TO REGISTER YOURSELF AND YOUR DRONE WITH THE FAA MORE INFO CAN BE FOUND AT: [HTTPS://WWW FAA GOV/UAS/GETTING STARTED/](https://www.faa.gov/uas/getting-started/)

After receiving the certificate of registration, you must mark your **unique FAA registration number** on the Drone by any means, such as permanent marker, label, engraving. This number must be readily accessible and maintained in a condition that is readable and legible upon close visual inspection

WARNING: Do **NOT** fly drone near airports or any other un-authorized areas. Follow all rules for Federal Aviation Administration (FAA) regulation summary for Small Unmanned Aircraft Systems (sUAS).

Read: Academy of Model Aeronautics (AMA) Know Before You Fly important information brochure.



Made in China